

INSTALLING CCTV ANYWHERE

(CLT Viewer for Symbian 60)

COMPATIBLE OPERATING SYSTEM & USER INTERFACE

CCTV anywhere is designed to work with phones that have the Symbian OS v7.0s (or higher) and the Symbian Series 60 Platform 2nd or 3rd Edition User Interface. A complete list may be found on the Symbian website www.symbian.com/phones.

INSTALLING SOFTWARE IN PHONE MEMORY

Copy the installation file (.SIS) to your removable memory card, use installation program such as Nokia Suite or email it to your phone. Install the program in your phone memory (not the memory card).

IMPORTANT

If you get certificate error when attempting to install *CCTV anywhere*, it is necessary to enable your phone to accept the Installation of Unsigned SIS files. Go to Tools > App. Manager, choose Options > Settings and set Software installation to All and Online certificate check to Off.

RUNNING CCTV ANYWHERE

Run the installed application and enter your Account User Name and Password when prompted. Accept all other default settings.

IMPORTANT

If you forget or mis-enter your User Name or Password you may reset the Log In details by selecting Setup on power up, and by entering 'reset' as the User Name. You will then be asked to re-enter the desired User Name and Password.

KEY CONTROLS

OK KEY: When viewing live video (in Normal mode), press video to enter Zoom Edit mode (a rectangle defining the zoom area will appear over the image). Press again to select the desired zoom area, enter Zoom mode and zoom in. Finally, press again to return to Normal mode and zoom back out.

ARROW KEYS: When in Zoom Edit mode, press arrow keys to move the zoom area around the image. When in Zoom Edit mode press the arrow keys to Pan the image.

NUMBER KEYS: When viewing live video (in Normal mode), pressing the number keys 1 through 6 will change the camera input for multicamera Camera Modules.

NUMBER '0' KEY: For screen resolutions greater than 160 pixels wide, pressing the '0' key toggles between full screen mode and normal screen mode.

'#' KEY and '*' KEY: For CLT Video Servers fitted with the Relay Output, the '#' key closes the relay (e.g. Turns on light) and the '*' key opens the relay (e.g. Turns off light).